



The refill method for all the cartridges in this document are the same, except as noted below. Use only freshly emptied cartridges, Cartridges which have been used and empty for longer than 24 hours may not work well.

For all cartridges:

1. Remove the label from the top of the cartridge to expose the vent/fill holes.
2. The maximum capacity for each cartridge is as follows:
3. Use a 5 cc syringe to fill each of the colors repeatedly filling the syringe if necessary for the black cartridge. Attach a needle to each syringe and then fill each syringe with the correct color and amount of ink. Avoid overfilling the cartridges.
4. Insert the needle all the way into the hole for the appropriate color (see pictures below). SLOWLY inject ink until all ink is dispensed or until ink starts to bubble around the needle. Withdraw the needle until only the tip is inserted and remove any excess ink from the fill hole. Return unused ink to the correct bottle.
5. Repeat for each color in the cartridge.
6. Inspect the cartridge for overfilling, this will usually demonstrate by releasing excess ink from the print head. If the cartridge is over filled do not use immediately. Place the cartridge on a paper towel and allow the excess ink to drain away.
7. DO NOT cover the fill holes. Leave cartridges as is, re-install and use immediately.


Cartridge	Fill Capacity Per Color
#56 (C6656A)	19 cc or 19 mL
#57 (C6657A)	5 cc or 5 mL per color
#58 (C6658A)	5 cc or 5 mL per color

#56 Cartridge

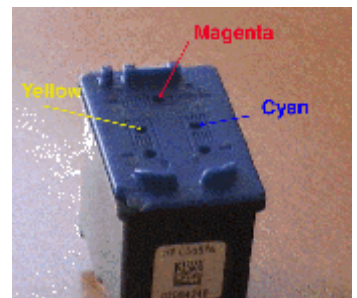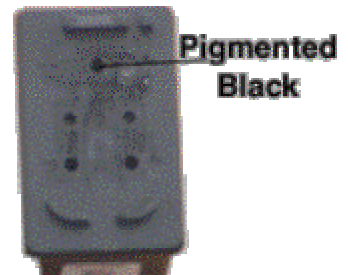

#57 Cartridge

#58 Cartridge

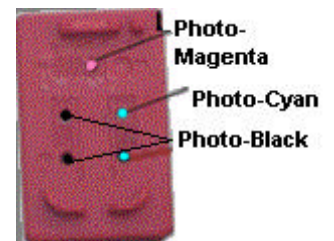

HP printers use a resistor recognition system to discourage refilling cartridges. This system is designed to prevent re-installing the same cartridge as a new cartridge. On most machines you can reset the system by removing the cartridge and immediately unplugging the printer to interrupt the loading/unloading process., leaving the carriage in the load position. You can then install the cartridge again and plug in the printer. This may not work with all models.

Additional recognition reset information is available at Additional support notes are available at: <http://www.weink.com/ecart/support/technotes/tsg01.htm>.

For cartridges with ink build-up on the face of the printhead use our Purge & Clean printhead cleaner to remove dried ink.